

# SERVICEBOX

## 8110E/8215E



- Box weight: 103 kg
- Dimensions of the box: 80x60x43 cm

### Parts included in the box:

<b>Twistlock Assembly</b>	4x Twistlock kit 8x Seal ring 8x O-ring 4x Ball joint 4x Seated pin 4x Nut 4x Indicator arm 4x Compression spring 4x Compression spring 4x Bracket 4x Tie rod 4x Indicator arm
<b>Wear pads</b>	20x Wear pad - (18x for 45ft spreader) 2x Wear pad (45ft spreader only) 4x Nylon pad 8x Gland - Extension rod
<b>Buffers</b>	4x Buffer - Extension rod 2x Nut - Extension rod (locking nut) 4x Buffer - Flipper arm 8x Buffer - Flipper arm
<b>Additional Items</b>	4x Proximity switch 4x Sensor
<b>Service Manual</b>	1x Service manual

The idea of ELME Servicebox is to facilitate service job and preventive maintenance of the spreader by boxing up selected genuine parts. The box includes all the parts we consider needed to be replaced at service. Purchasing the servicebox directly together with an equipped machine ensures that the ELME spreader continues to hold a high level in terms of its dependability and reliability. Additionally it ensures low downtime and is more economical than buying all the parts individually. Even better is that it keeps the spreader in good condition by regularly service checkups!

Servicebox 8110E/8215E is valid for all standard models delivered from the launch in year 2017.

Serviceboxes are available for the following ELME spreader models:

#### Truck spreaders - Empty container

- 584LA
- 584LB
- 584LD
- 586TB
- 588TB

#### Truck spreaders - Laden container

- 815/818
- 817
- 857

#### Crane spreaders

- 8110E/8215E

## ELME GENUINE PARTS - PERFORMANCE, RELIABILITY AND SAFETY

An ELME spreader consists of more than 3,000 parts – all carefully designed and built to provide the highest possible level of **performance**. Elme Genuine Parts, our range of approved spare parts and accessories, are 100% made for your ELME spreader – with the exact right qualities, dimensions and features – to secure the **reliability** and **safety** of your product. By using ELME genuine parts, you always get parts you can rely on and true peace of mind. If you are using non-genuine parts, you put weak links into a strong, perfectly designed chain of interactive components.

On a number of our spare parts we expand **safety** and traceability with a tooled product labeling, everything to improve the certainty of using genuine parts. Another example of this process is our twistlock certificate. This document ensures the origin and quality of the twistlocks and certifies that the twistlocks are tested.

Every single part of an ELME spreader is built at our plant in Älmhult, Sweden. And that's the way it's been since 1974. All the work is carried out here - from design and product development to manufacturing, assembling and testing. This unique approach lets us have 100% control over the production and the final quality of our products. It's our way to ensure the **performance**, **reliability** and **safety**.



For more information and Servicebox manual, please visit [www.elme.com](http://www.elme.com).

### HEAD QUARTER AND PRODUCTION ELME Spreader AB

Phone +46 476 558 00  
Email [sales@elme.com](mailto:sales@elme.com)  
Website [www.elme.com](http://www.elme.com)

### SALES AND SPARE PARTS ELME Spreader Trading (Shanghai) Co., Ltd

Phone +86 21 5169 8922  
Email [sales.cn@elme.com](mailto:sales.cn@elme.com)

### SPARE PARTS ELME Americas Inc.

Phone +1 731 588 02 20  
Email [sales.us@elme.com](mailto:sales.us@elme.com)