MODEL 8215

FOR LADEN CONTAINER HANDLING WITH RAIL MOUNTED OR RUBBER TYRED GANTRY CRANES



Standard supply includes:

- Mounting arrangement to fit crane
- Mechanical Pile Slope (MPS)
- Four pendular ISO twistlocks
- Lifting eyes near twistlocks
- Hydraulic telescoping
- Solenoid valves for all hydraulic functions
- Electrical and mechanical twistlock protection and indication system
- Electric telescoping protection system
- Lift interrupt signal
- LED-indication lights

Spreader Model 8215 is a telescopic top spreader for handling of laden ISO containers up to 41 tonnes. 8215 is designed for mounting on Rail Mounted (RMG) or Rubber Tyred Gantry (RTG) cranes.

The strong and basic concept offers distinct advantages, such as two parallel telescopic beams, assuring max overlap. The beam sections are dimensioned to absorb not only the vertical, but also the very considerable horizontal forces.

TWISTLOCK SYSTEM

The twistlock system is manufactured in a very rugged design and well proven since many years. 8215 has hardened, penduling ISO quick exchange twistlocks, hydraulically activated with electrical and mechanical interlocking against faulty locking and unlocking.

TELESCOPING SYSTEM

Telescoping is powered by one hydraulic cylinder in each beam.

HYDRAULIC SYSTEM

Double electric motors and pump assemblies assure simultaneous telescoping of both beams. The spreader can be operated with one electric motor and pump.


CONTROL AND PROTECTION SYSTEM


The control voltage on the spreader is always converted to 24V DC for safety and reliability. Electrical systems monitor the state of the spreader at all times.

Indicator lights advise the operator when the spreader is correctly seated, locked or not locked. Each signal is a precondition for the important protection functions of the spreader, such as twistlock activation, telescoping and lift interrupt.

Swedish Spreader Systems


MODEL 8215

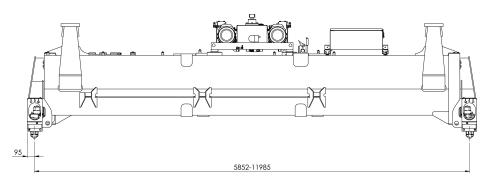

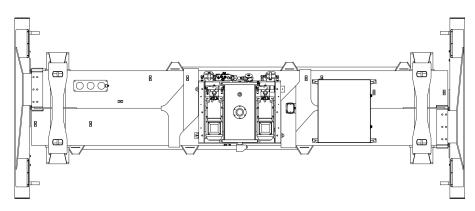

1440



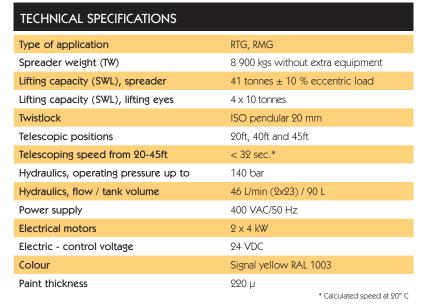

All specifications are subject to change without notice. A list of options enables you to adapt the product more precisely to your needs and further information is available on request.

HEAD QUARTER AND PRODUCTION

ELME Spreader AB +46 476 558 00 Phone Email sales@elme.com

Website www.elme.com

SALES AND SPARE PARTS ELME Spreader Trading (Shanghai) Co., Ltd +86 21 5169 8922 Phone Email sales.cn@elme.com

Indication lights.



Twistlock and lifting eye.

SPARE PARTS ELME Americas Inc. +1 731 588 02 20 Phone Email sales.us@elme.com

For details, spare parts and more products, visit www.elme.com

